




Paradox K35 User Guide

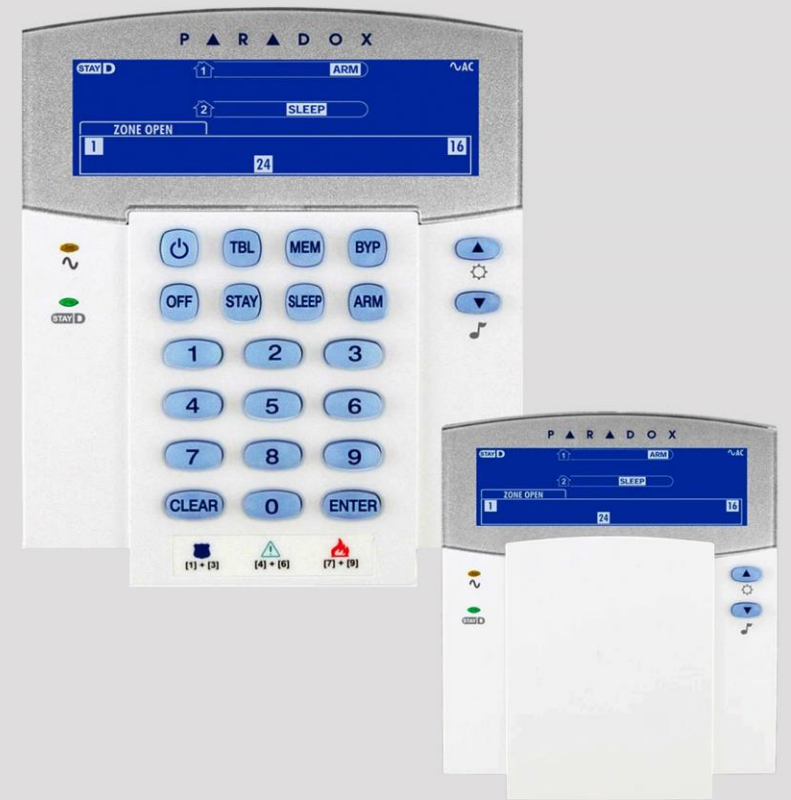

Paradox K35 Overview

The image shows a Paradox K35 security panel. The top section features a blue LCD display with the word 'PARADOX' at the top. The display shows 'STAY D' on the left, a house icon with '1' and '2' below it, and 'ARM' on the right. Below this, it shows 'ZONE OPEN' with '1' and '16' in boxes, and '24' in the center. The bottom section is a white keypad with buttons for power, TBL, MEM, and BYP in the top row; OFF, STAY, SLEEP, and ARM in the second row; a numeric keypad (1-9, 0, CLEAR, ENTER) in the third and fourth rows; and three function buttons at the bottom: a blue shield icon for '[1] + [3]', a green triangle icon for '[4] + [6]', and a red fire icon for '[7] + [9]'. To the left of the keypad are two indicator lights: a yellow one with a squiggle and a green one with 'STAY D'. To the right are three buttons: an up arrow, a gear, and a down arrow.

Partition Status

Zone Status

Arm / Sleep / Stay
On = Partition Armed
Off = Partition Disarmed
Flash = Exit Delay (10s)

TBL - Trouble Display
On = Trouble(s) occurring

MEM - Alarm Memory
On = Alarm(s) occurred

BYP - Bypass Programming
On = Zone(s) Bypassed

Arming and Disarming



To Arm when leaving site

1. Close all zones in the desired partition
2. Enter your Code
or push ARM then enter your code



To Arm when staying

To stay arm:

1. Press the STAY key
2. Enter your Code

To Sleep Arm:

1. Press the SLEEP Key
2. Enter your Code




To Disarm

1. Press OFF
2. Enter your Code

User Codes




Adding a User Code

1. Press the  key.
2. Enter your MASTER code - please contact Tarnix if unknown.
3. Select a user by entering a 2-digit user number (01-32)
4. Enter a 4 digit code (this will be the user code)
5. Confirm the user code
6. To exit press CLEAR
7. Test code on alarm system



Deleting a User Code


1. Press the  Key
2. Enter your MASTER Code
3. Select a user by entering a 2-digit user number
4. Press and hold the SLEEP Key until you hear the confirmation beep

Please contact Tarnix Security on 07-573-7757 if required

Troubleshooting

Accessing the Trouble Display

Press TBL - from there a number should display

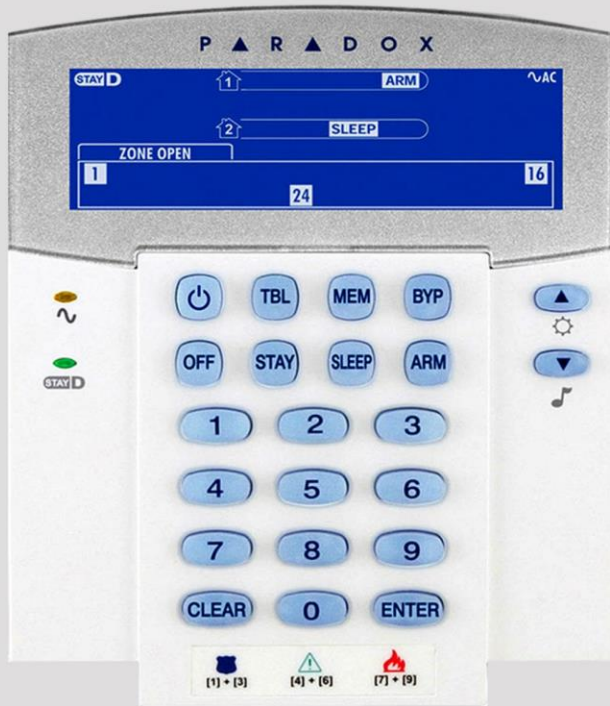

#1: Wireless Zone Low Battery - Batteries for a wireless device required to be replaced

#2: Power Trouble - The control panel is experiencing power trouble

#3: Bell Trouble - There is a siren disconnection/overload on the control panel

#4: Communication Trouble - Alarm Monitoring Communication is loss

#5: Tamper - A wiring problem is occurring

#6: Module Tamper

#7: Fire Trouble

#8: Timer Loss - Date and time requires to be reset

#9: Wireless Zone Supervision Loss - Wireless zones are no longer communicating

#10: Module Supervision Loss: Modules are no longer communicating with the system

#16: Keypad Fault - There is a fault with the keypad

For all Alarm system faults please contact Tarnix Security to book a Tech.

--- To silence the Keypad Beep Press TBL ---

Please contact Tarnix Security on 07-573-7757